


**10.3.18 License plate light**

The license plate light connectors are located under the seat. To access refer to “12.1 Seat removal” on page 122.

The connectors are two and the figure shows the connectors on the system side “A” and the connectors of the device “B”.

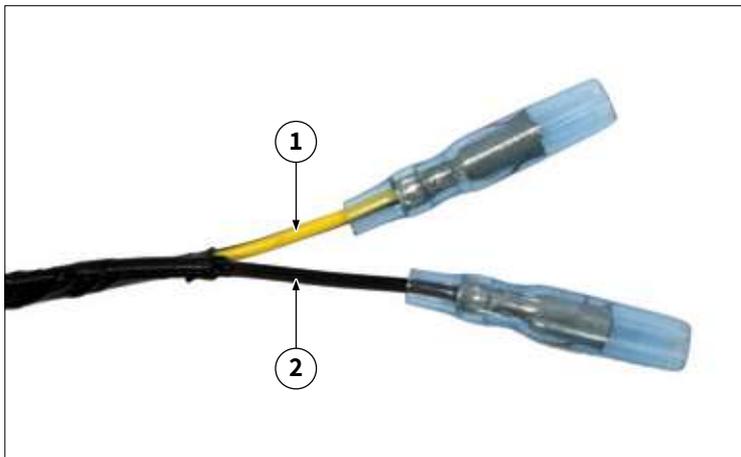


The connectors on the vehicle wiring side are identified as shown in the figure.

The license plate light connectors are Red and Black.

The coupling is as follows:

1. Yellow-Black (system side) to be connected to the Red one (device side);
2. Black (system side) to be connected to Black one (device side).

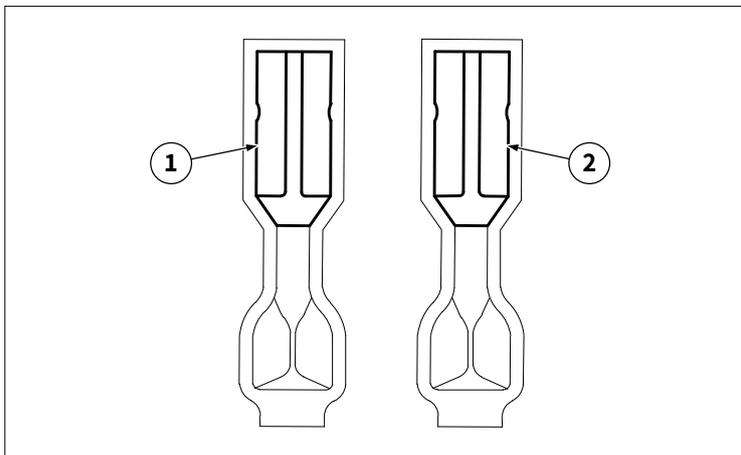

Pin	Colour	Function
1	G-N	Input signal (+) license plate light
2	N	Ground