

12.8 FUEL TANK REMOVAL


Remove:

- Left side panel.

12.8.1 Cover removal

Lift up the rubber guards and remove the screws "A", then remove the cover.


i Proceed in the reverse order for reassembling.

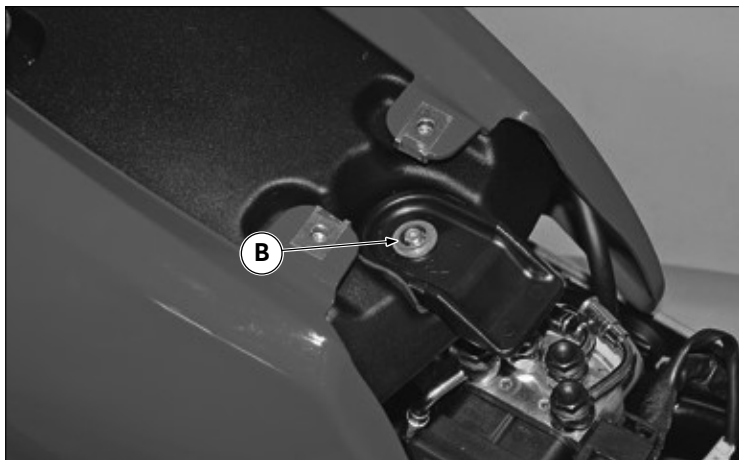

12.8.2 Complete tank removal

Remove:


- Fuel tank cover; refer to "12.8.1 Cover removal" on page 127.
- Remove the screw "B".

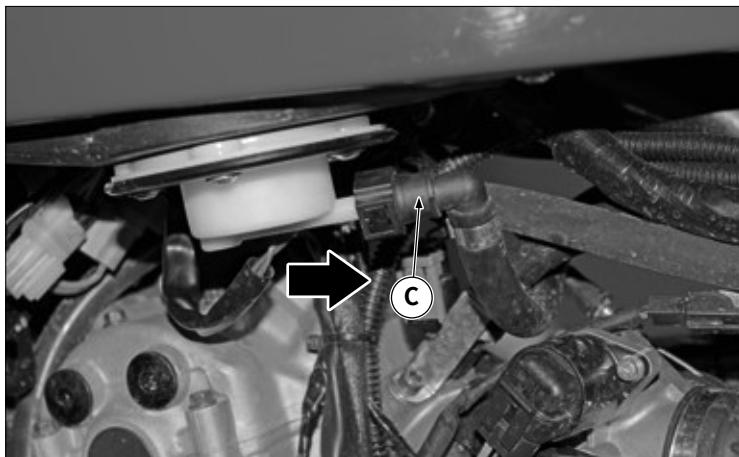

Disconnect the rubber tube "C" from the fuel pump.




Disconnect the fuel pump connector "D" from the main wiring.

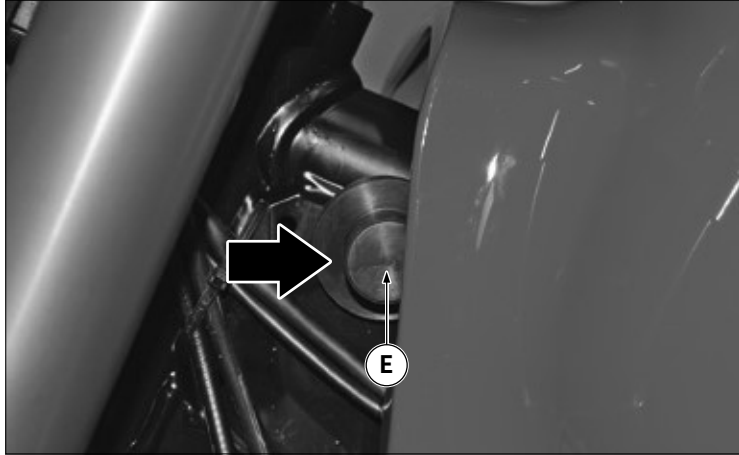

Lift the tank removing it from the front pads “E” and remove the tank.


(i) Proceed in the reverse order for reassembling.

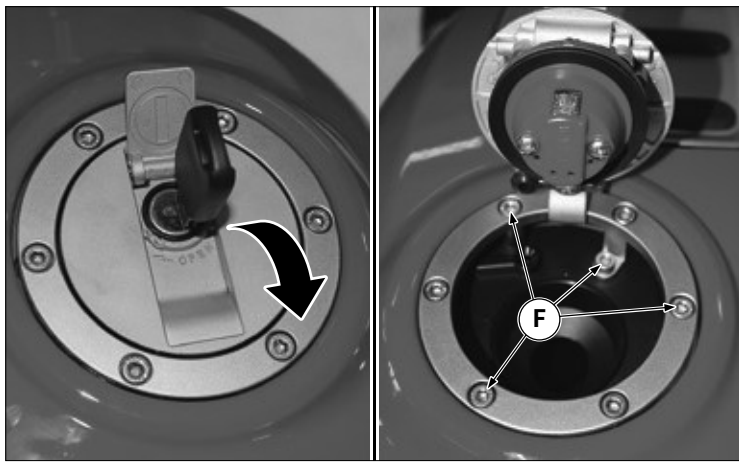

12.8.3 Fuel cap removal

Open the fuel cap with the key and remove the screws “F”, then remove the cap.

(i) Proceed in the reverse order for reassembling.

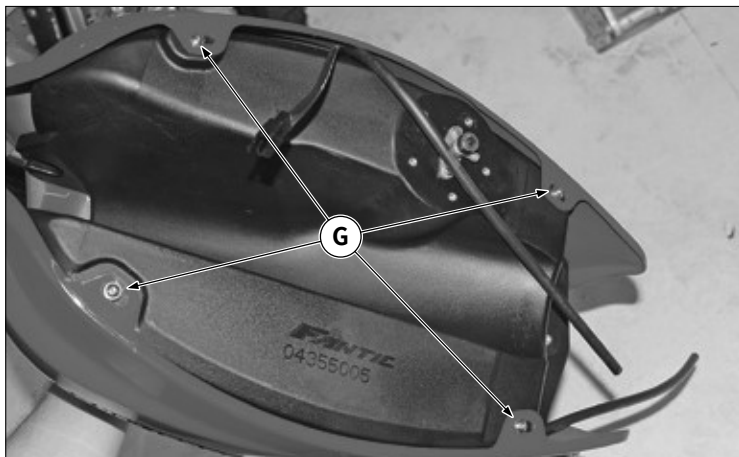

12.8.4 Tank cover removal

Remove:

- Tank cover, refer to “12.8.1 Cover removal” on page 127“;
- Complete fuel tank, refer to “12.8.2 Complete tank removal” on page 127“;
- Fuel cap.

Remove the screws “G” and separate the cover from the fuel tank.

(i) Proceed in the reverse order for reassembling.