




## Steps for the First Installation of BA062010.




**Step 1**  
Remove the C type ring from the bike and remove the stock gauge.

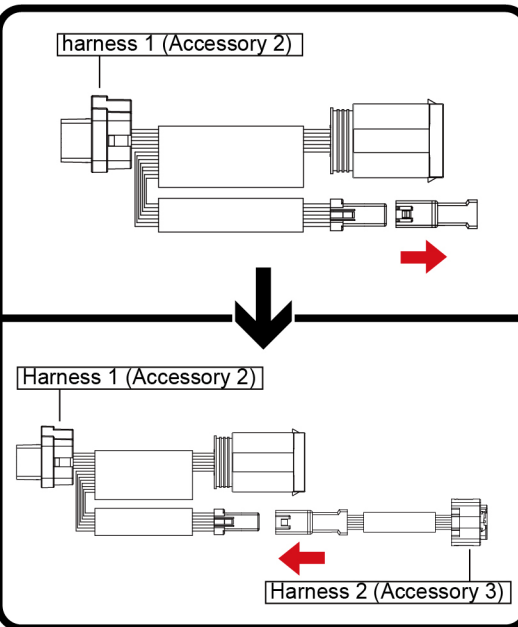

**Step 2**  
Remove the connector from Harness 1 (Accessory 2) and then connect Harness 1 with Harness 2(Accessory 3).

**NOTE** Please store the connector well, it will be used later.

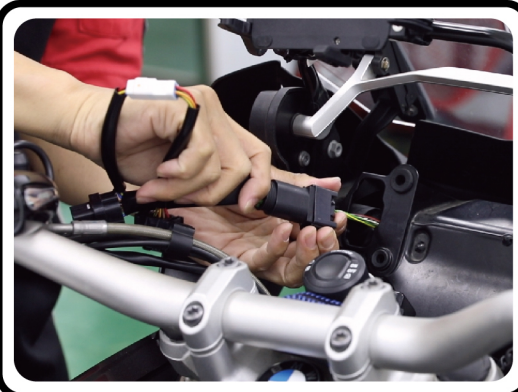

**Step 3**  
Connect with the meter harness (Harness 1 + Harness 2).



**Step 4**  
Put on the outlet cover(Accessory 8).




**Step 5**  
Connect with Koso RX5 meter. (With Bracket and meter harness)




**Step 6**  
Connect with the harness from the stock gauge.




**Step 7**  
KEY ON and wait for 5 seconds to sync the information and then KEY OFF.

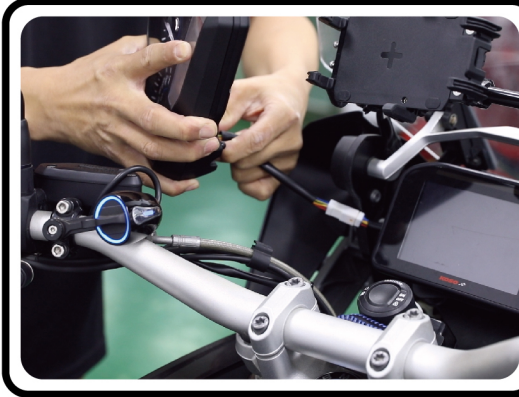

**Step 8**  
Disconnect the stock gauge.

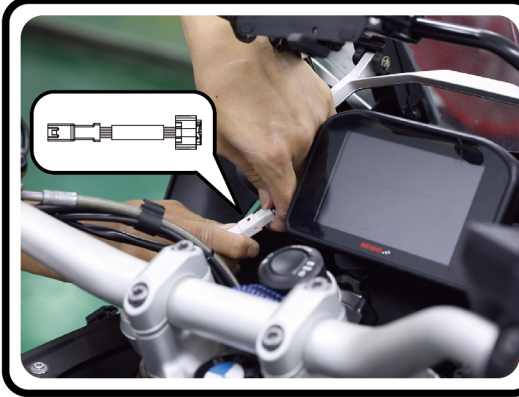


**Step 9**  
Remove the Harness 2(Accessory 3).

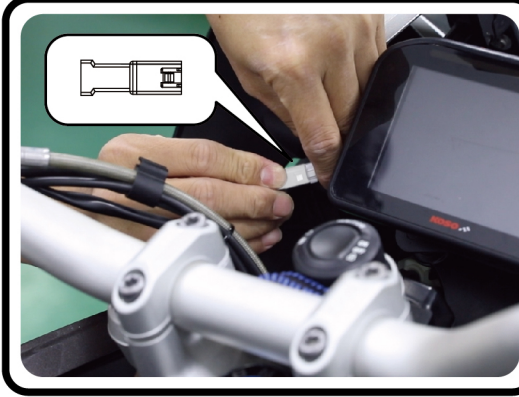

**Step 10**  
Put back the connector on the Harness 1.



**Step 11**  
Organize the cables.

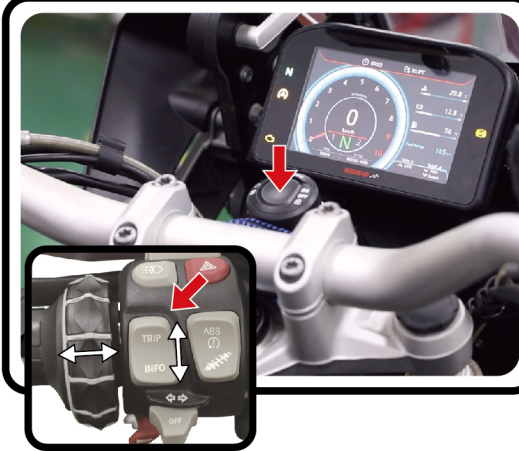

**Step 12**  
KEY ON and press keys to make sure the gauge is working great.



**Step 13**  
You are all set!